



# Defender Door Lock – Composite Keep Adjustment Guide

The Securistyle Defender Door Lock keeps can be adjusted to optimise lock operation and weather tightness of the door. The following instructions will explain how to set the keeps to ensure the correct set-up for the end user.


## Keep adjustment sequence

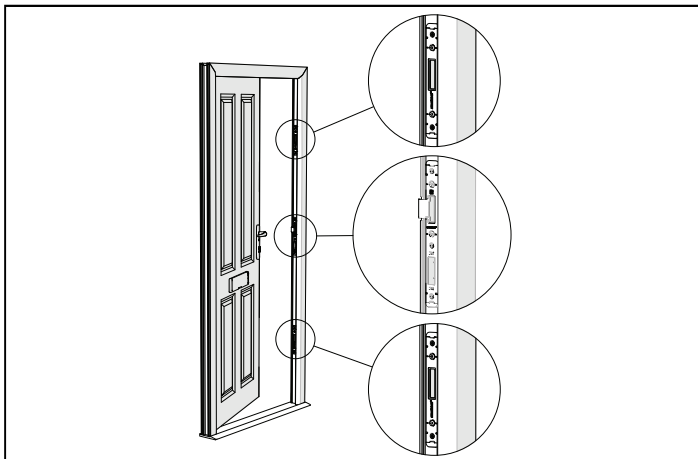


1. Following installation and with all keeps fitted, weather tightness/compression can be adjusted.

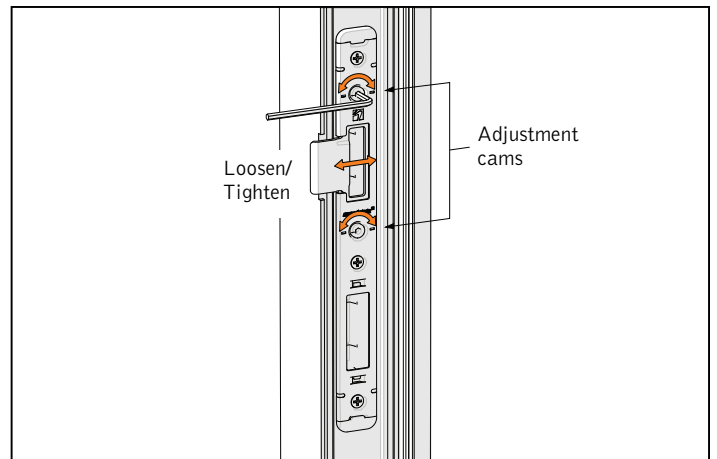

2. Close door (without slamming) and check latch has engaged fully. If required, use 3mm hex key to adjust centre keep by rotating adjustment cams as shown\*.

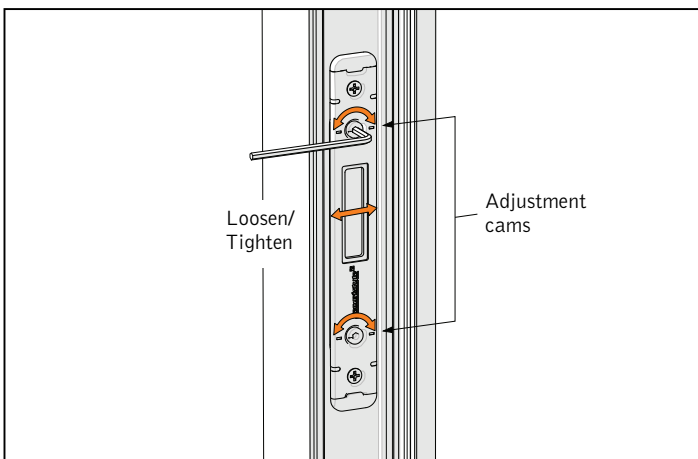

3. Once centre keep has been set, adjust compression of top keep if required.

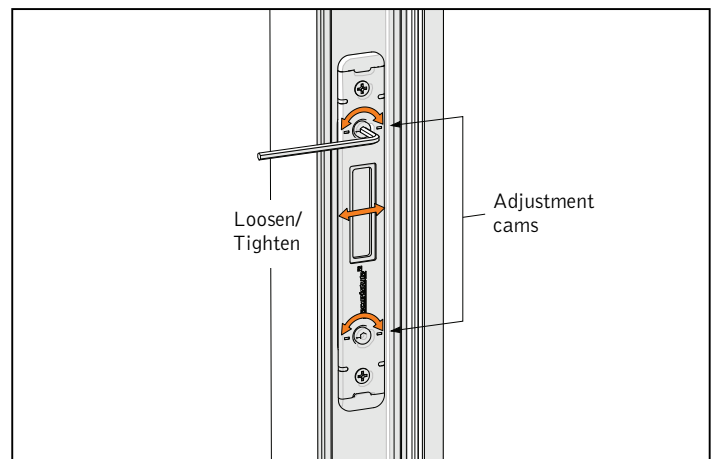

4. Repeat adjustment sequence for bottom keep. Lift lever to check for smooth operation and ensure weather tightness/compression is correct. Repeat stages 3 & 4 until optimum closure is achieved.

\*If door is set for Secure Escape, lift lever to throw end locking points and check external lever cannot be operated to withdraw them (without use of key). If external lever does withdraw locking points, adjust centre keep further to reduce compression until this is no longer possible.

**Note:**

It is recommended that for the selection, installation and maintenance of hardware for door sets, GGF guidelines section 6.7, 6.8 & 6.9 are followed.

The Securistyle Defender Door Lock shown is for illustrative purposes only, other variants are available. Further information on this product range can be found at [www.securistyle.co.uk](http://www.securistyle.co.uk)